




## 1. Pull out hose

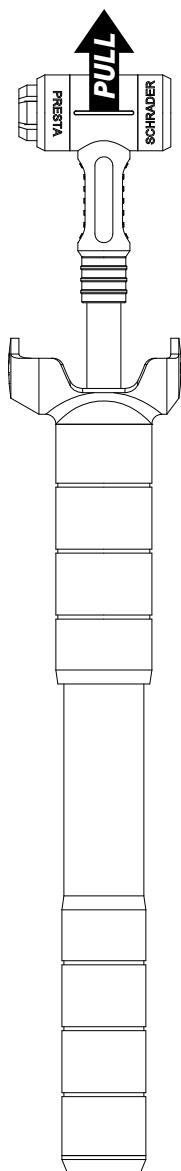


## 2. Choose the right valve

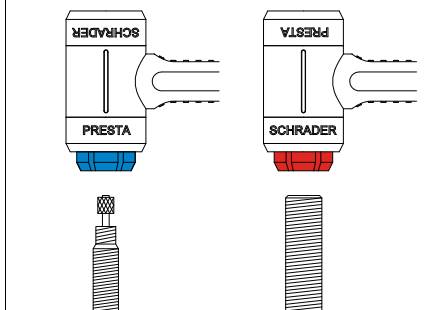


## 3. Engage to tire valve

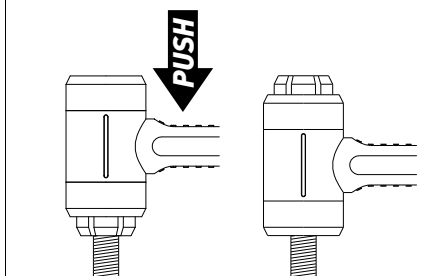

## 4. Pump up the tire

 

## 5. Remove from tire valve

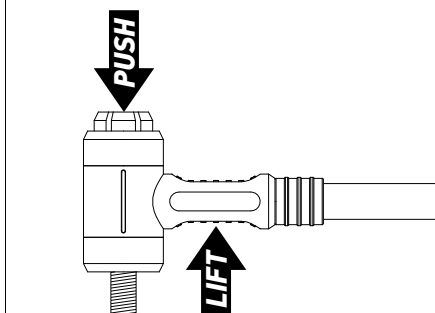

**CUBE.EU**

Pending System GmbH & CO KG

CUBE Bikes

Ludwig-Hüttner-Str. 5-7

D-95679 Waldershof